

Service Manual

Radio

FM-AM-SW_{1~6} 8-BAND
PORTABLE RADIO

RF-2200BS(A)



■ SPECIFICATIONS

Frequency Range:	FM	87.5~108 MHz	Power Output:	SW ₅	0.3μV for 50 mW Output
	MW	525~1610 kHz (571~186m)		SW ₆	0.3μV for 50 mW Output
Intermediate Frequency:	SW ₁	3.9~8 MHz (76.9~37.5m)	Power Source:	3W (DC Max.)	
	SW ₂	8~12 MHz (37.5~25m)		2.4W (MPO)	
	SW ₃	12~16 MHz (25~18.8m)	Power Consumption:	AC 110—125/220—240V 50/60 Hz or	
	SW ₄	16~20 MHz (18.8~15m)		6V (Four "D" Size Flashlight	
	SW ₅	20~24 MHz (15~12.5m)	Speaker:	Batteries)	
	SW ₆	24~28 MHz (12.5~10.7m)		(Panasonic UM-1 or equivalent)	
Sensitivity:	FM	10.7 MHz	Dimensions:	7W (AC Only)	
	MW & SW	2nd 455 kHz	Weight:	10 cm (4") PM Dynamic Speaker	
	SW	1st 1.985 MHz		12 $\frac{1}{2}$ " (Wide) × 7 $\frac{1}{2}$ " (High) ×	
	FM	2μV (S/N 6 dB)/50 mW Output	Impedance:	3 $\frac{1}{8}$ " (Deep)	
	MW	14μV/m for 50 mW Output		(318 × 188 × 100 mm)	
	SW ₁	0.5μV for 50 mW Output	Recording Out Jack	3 kg (6 lb. 9.8 oz.) without batteries	
	SW ₂	0.5μV for 50 mW Output		Speaker8Ω	
	SW ₃	0.5μV for 50 mW Output		Earphone Jack8Ω	
	SW ₄	0.5μV for 50 mW Output		Recording Out Jack3kΩ	

Specifications are subject to change without notice for further improvement.

 **National Panasonic**

Matsushita Electric Trading Co., Ltd.
P.O. Box 288, Central Osaka, Japan

■ TO REMOVE FRONT AND REAR COVER

1. Set dial scale to minimum frequency.
2. Remove the ten (10) knobs for the FM AFC, X-TAL MARKER, VOLUME, BASS, TREBLE, TUNING SPEED, BAND and MW/SW RF GAIN.
3. Lift up the gyro antenna.
4. Remove the battery cover and pull out the batteries.
5. Remove the six (6) screws for the cabinet cover, as shown in fig. 1.
6. Remove the rear cover.
7. Remove the sockets from chassis.
8. Push the catch in the direction of arrow, as shown in fig. 2 and remove the front cover.
9. Remove the sockets from chassis.
0. To reassemble, reverse the above procedure and note the following.
 1. Set power and AFC switch to "ON" position.
 2. Set X-TAL marker and BFO switch to "OFF" positions.

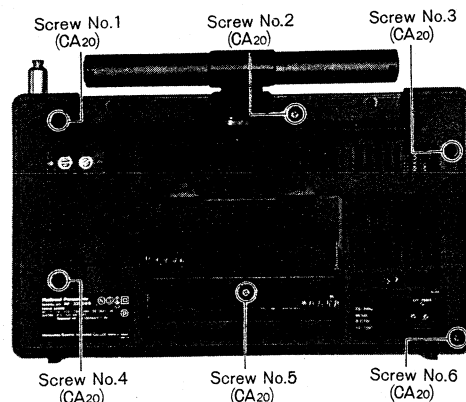


Fig. 1

■ TO REMOVE DIAL DRIVE ASSEMBLY

1. Set band switch to "SW-SW₁" position.
2. Remove the cabinet covers. (Refer to cabinet cover removal instruction.)
3. Remove the four (4) screws (nos. 1~4) for the dial drive assembly, as shown in fig. 3.
4. Turn the tuning shaft to clockwise and set the two (2) screws at the position, as shown in fig. 4.
5. Loosen the one (1) screw (no. 2) for the variable capacitor shaft, as shown in fig. 4.
6. Turn tuning shaft fully counter-clockwise.
7. Loosen the one (1) screw (no. 1) for the variable capacitor shaft, as shown in fig. 4.
8. Remove the tuning knob.
9. Push the catch in the direction of arrow ① and remove the front panel in the direction of arrow ②, as shown in fig. 5.
10. Remove the six (6) screws (nos. 1~6) for the dial drive assembly, as shown in fig. 6.
11. Remove the dial drive assembly.
12. To reassemble, reverse the above procedure and note the following.
 1. Set the band switch shaft at the position (SW, SW₁), as shown in fig. 7.
 2. Set the band switch shaft of dial drive assembly at the position, as shown in fig. 8.
 3. Set the "0" point of dial scale to pointer of front panel, as shown in fig. 8.
 4. Set tuning capacitor to maximum capacity.
 5. Insert the dial drive assembly in chassis.
 6. Turn the shaft of band selector drum with a pliers and set the indicator of band selector drum to "SW₁" position, as shown in fig. 8.

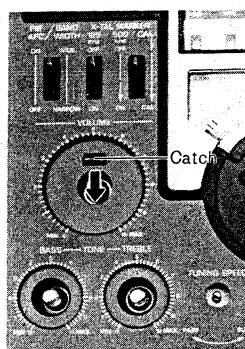


Fig. 2

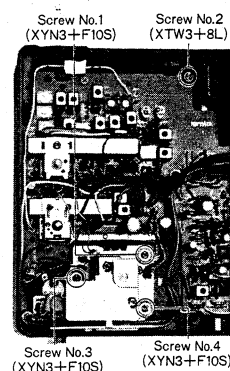


Fig. 3

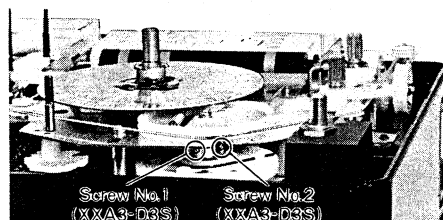


Fig. 4

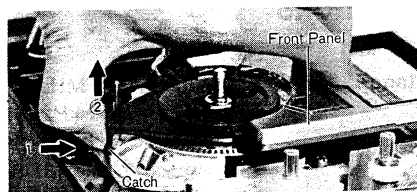


Fig. 5

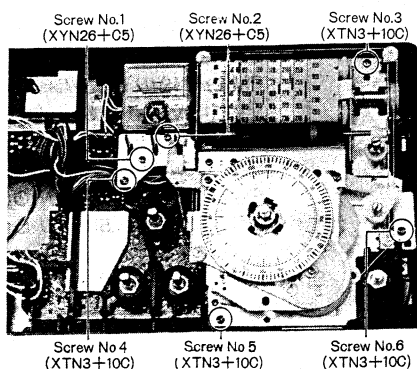


Fig. 6

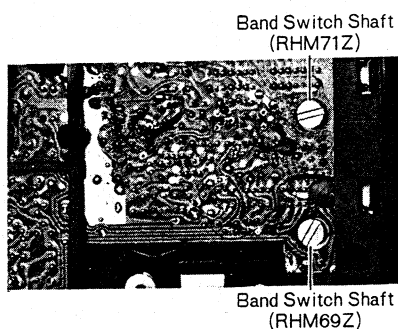


Fig. 7

■ DIAL CORD INSTALLATION GUIDE

1. Remove dial drive assembly. (Refer to dial drive assembly removal instruction.)
2. Remove spread dial.
3. Loosen the one (1) screw for the drum shaft, as shown in fig. 8.
4. Set the dial drum at the position, as shown in fig. 9.
5. Turn tuning shaft fully counter-clockwise.
6. Cord length is 100 cm (39 $\frac{3}{8}$ "').
7. Arrows (1~12) indicate correct order and direction of dial cord installation, as shown in fig. 9.
8. Cement dial cord ends.
9. Set the "0" point of dial scale to pointer of front panel. (Refer to dial scale mounting instruction.)

■ TO MOUNT DIAL SCALE

1. Remove the front cover. (Refer to cabinet cover removal instruction.)
2. Remove the front panel. (Refer to dial drive assembly removal instruction.)
3. Loosen the one (1) screw for the drum shaft, as shown in fig. 10.
4. When removed the rollers, set the roller no. 1 and 2 at the position, as shown in fig. 11.
5. Wind the dial scale onto roller no. 2 shown in fig. 10 and secure the gear of roller no. 2. Hook the dial scale on the catch of roller no. 1, as shown in fig. 10.
6. Mount the front panel to chassis.
7. Turn the tuning shaft fully counter-clockwise.
8. Turn the roller gear, shown in fig. 12 and set the "0" point of dial scale to the pointer of front panel, as shown in fig. 8. Tighten the one (1) screw for the drum shaft, as shown in fig. 8.

■ TO REMOVE POWER, LIGHT AND BFO SWITCH

1. Remove the cabinet covers. (Refer to cabinet cover removal instruction.)
2. Push the four (4) catches in the direction of arrow shown in fig. 13 and remove the switch.
3. To reassemble, reverse the above procedure.

■ TO REMOVE BASS, TREBLE, VOLUME AND RF GAIN CONTROL

1. Remove the cabinet covers. (Refer to cabinet cover removal instruction.)
2. Remove the dial drive assembly. (Refer to dial drive assembly removal instruction.)
3. Set variable capacitor to maximum capacity.
4. Unsolder the lead wire of RF gain control from chassis.
5. Remove the meter and dial lamp.
6. Remove the power, light and BFO switch. (Refer to switch removal instruction.)
7. Remove the FM AFC and X-TAL marker switch.
8. Remove the three (3) red screws (nos. 1~3) for the PC board, as shown in fig. 14.
9. Remove the two (2) screws (nos. 4 & 5) for the lead wires, as shown in fig. 14.
10. Remove the four (4) nuts (nos. 1, 3, 4 & 5) for the controls, as shown in fig. 15.
11. Remove the one (1) screw (no. 2) for sub PC board, shown in fig. 15 and remove sub PC board.
12. Push the eight (8) catches for the PC board, shown in fig. 15 and remove PC board.
13. Unsolder the controls, as shown in fig. 16.

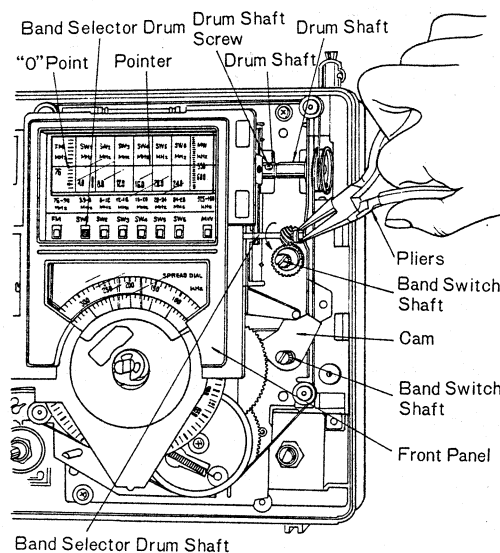


Fig. 8

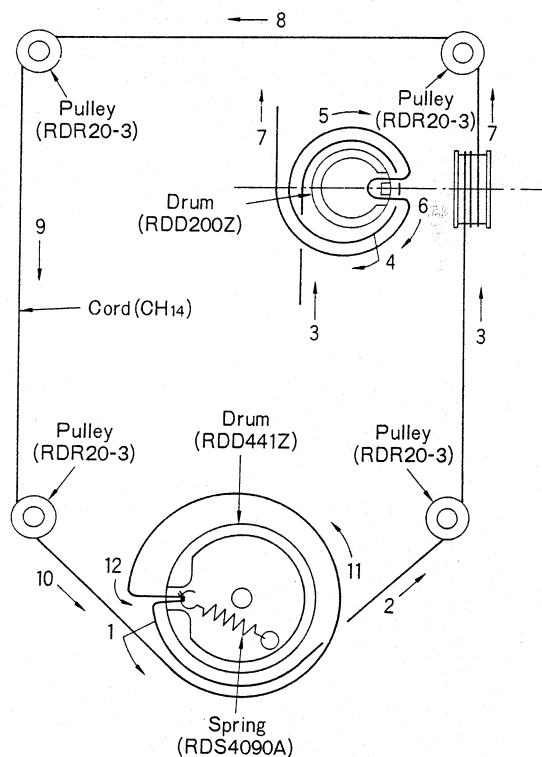


Fig. 9

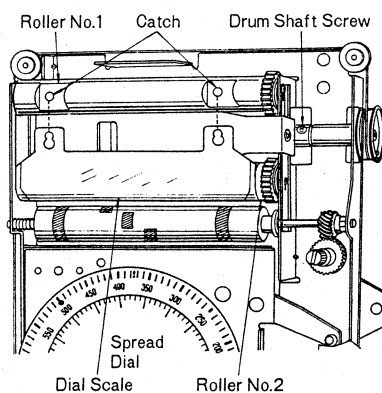


Fig. 10

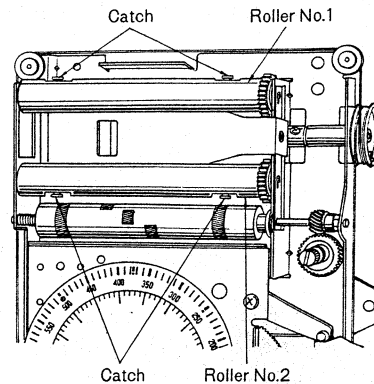


Fig. 11

■ TO REMOVE GYRO ANTENNA CASE ASSEMBLY

1. Remove the rear cover. (Refer to cabinet cover removal instruction.)
2. Unsolder the lead wire of gyro antenna from PC board.
3. Remove the circlip in the direction of arrow, as shown in fig. 17.
4. Remove the gyro antenna case.
5. To reassemble, reverse the above procedure.


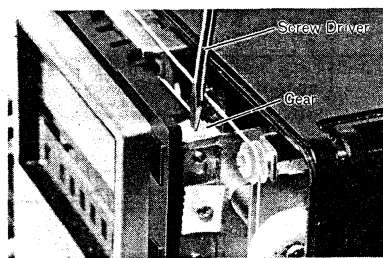


Fig. 12

■ TO REMOVE CORE ANTENNA

1. Remove the gyro antenna cover in the direction of arrow, as shown in fig. 18.
2. Unsolder lead wires from core antenna, as shown in fig. 19.
3. To reassemble, reverse the above procedure.

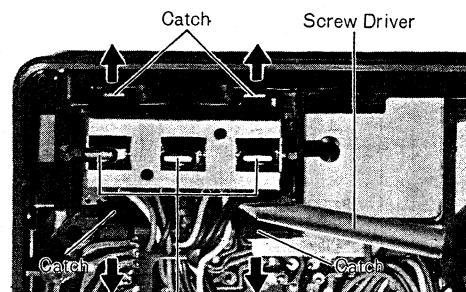

Power/Light/BFO Switch

Fig. 13

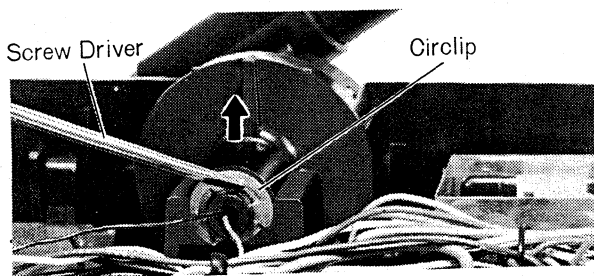


Fig. 17


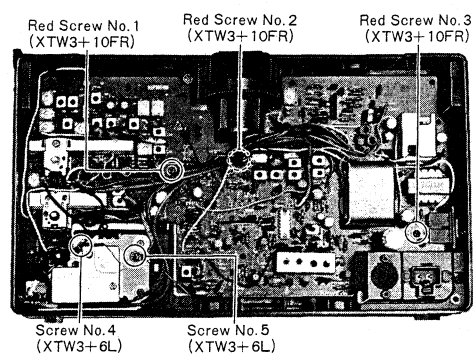


Fig. 14

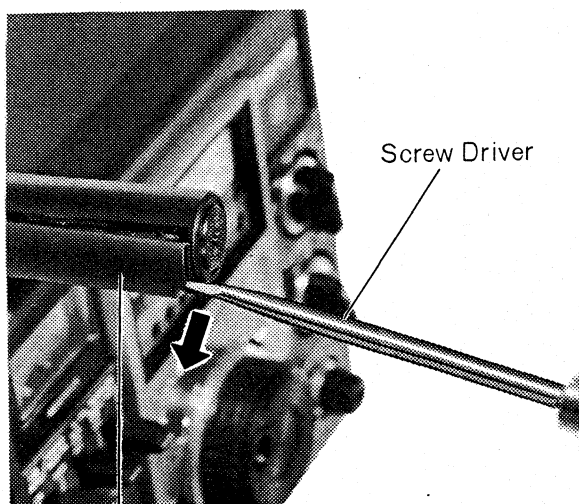

Gyro Antenna Cover

Fig. 18

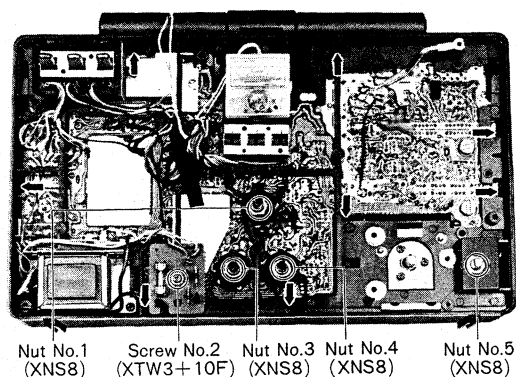


Fig. 15

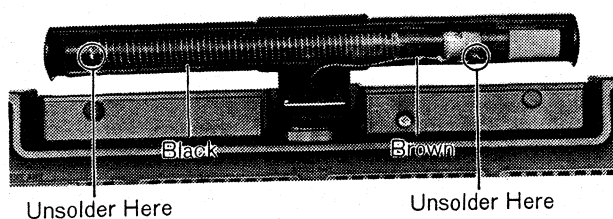


Fig. 19


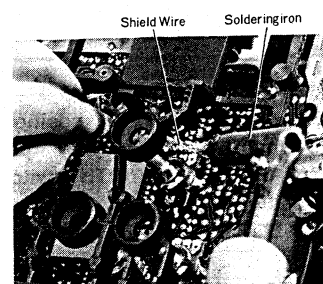


Fig. 16

Schematic Diagram - Model RF-2200BS ①

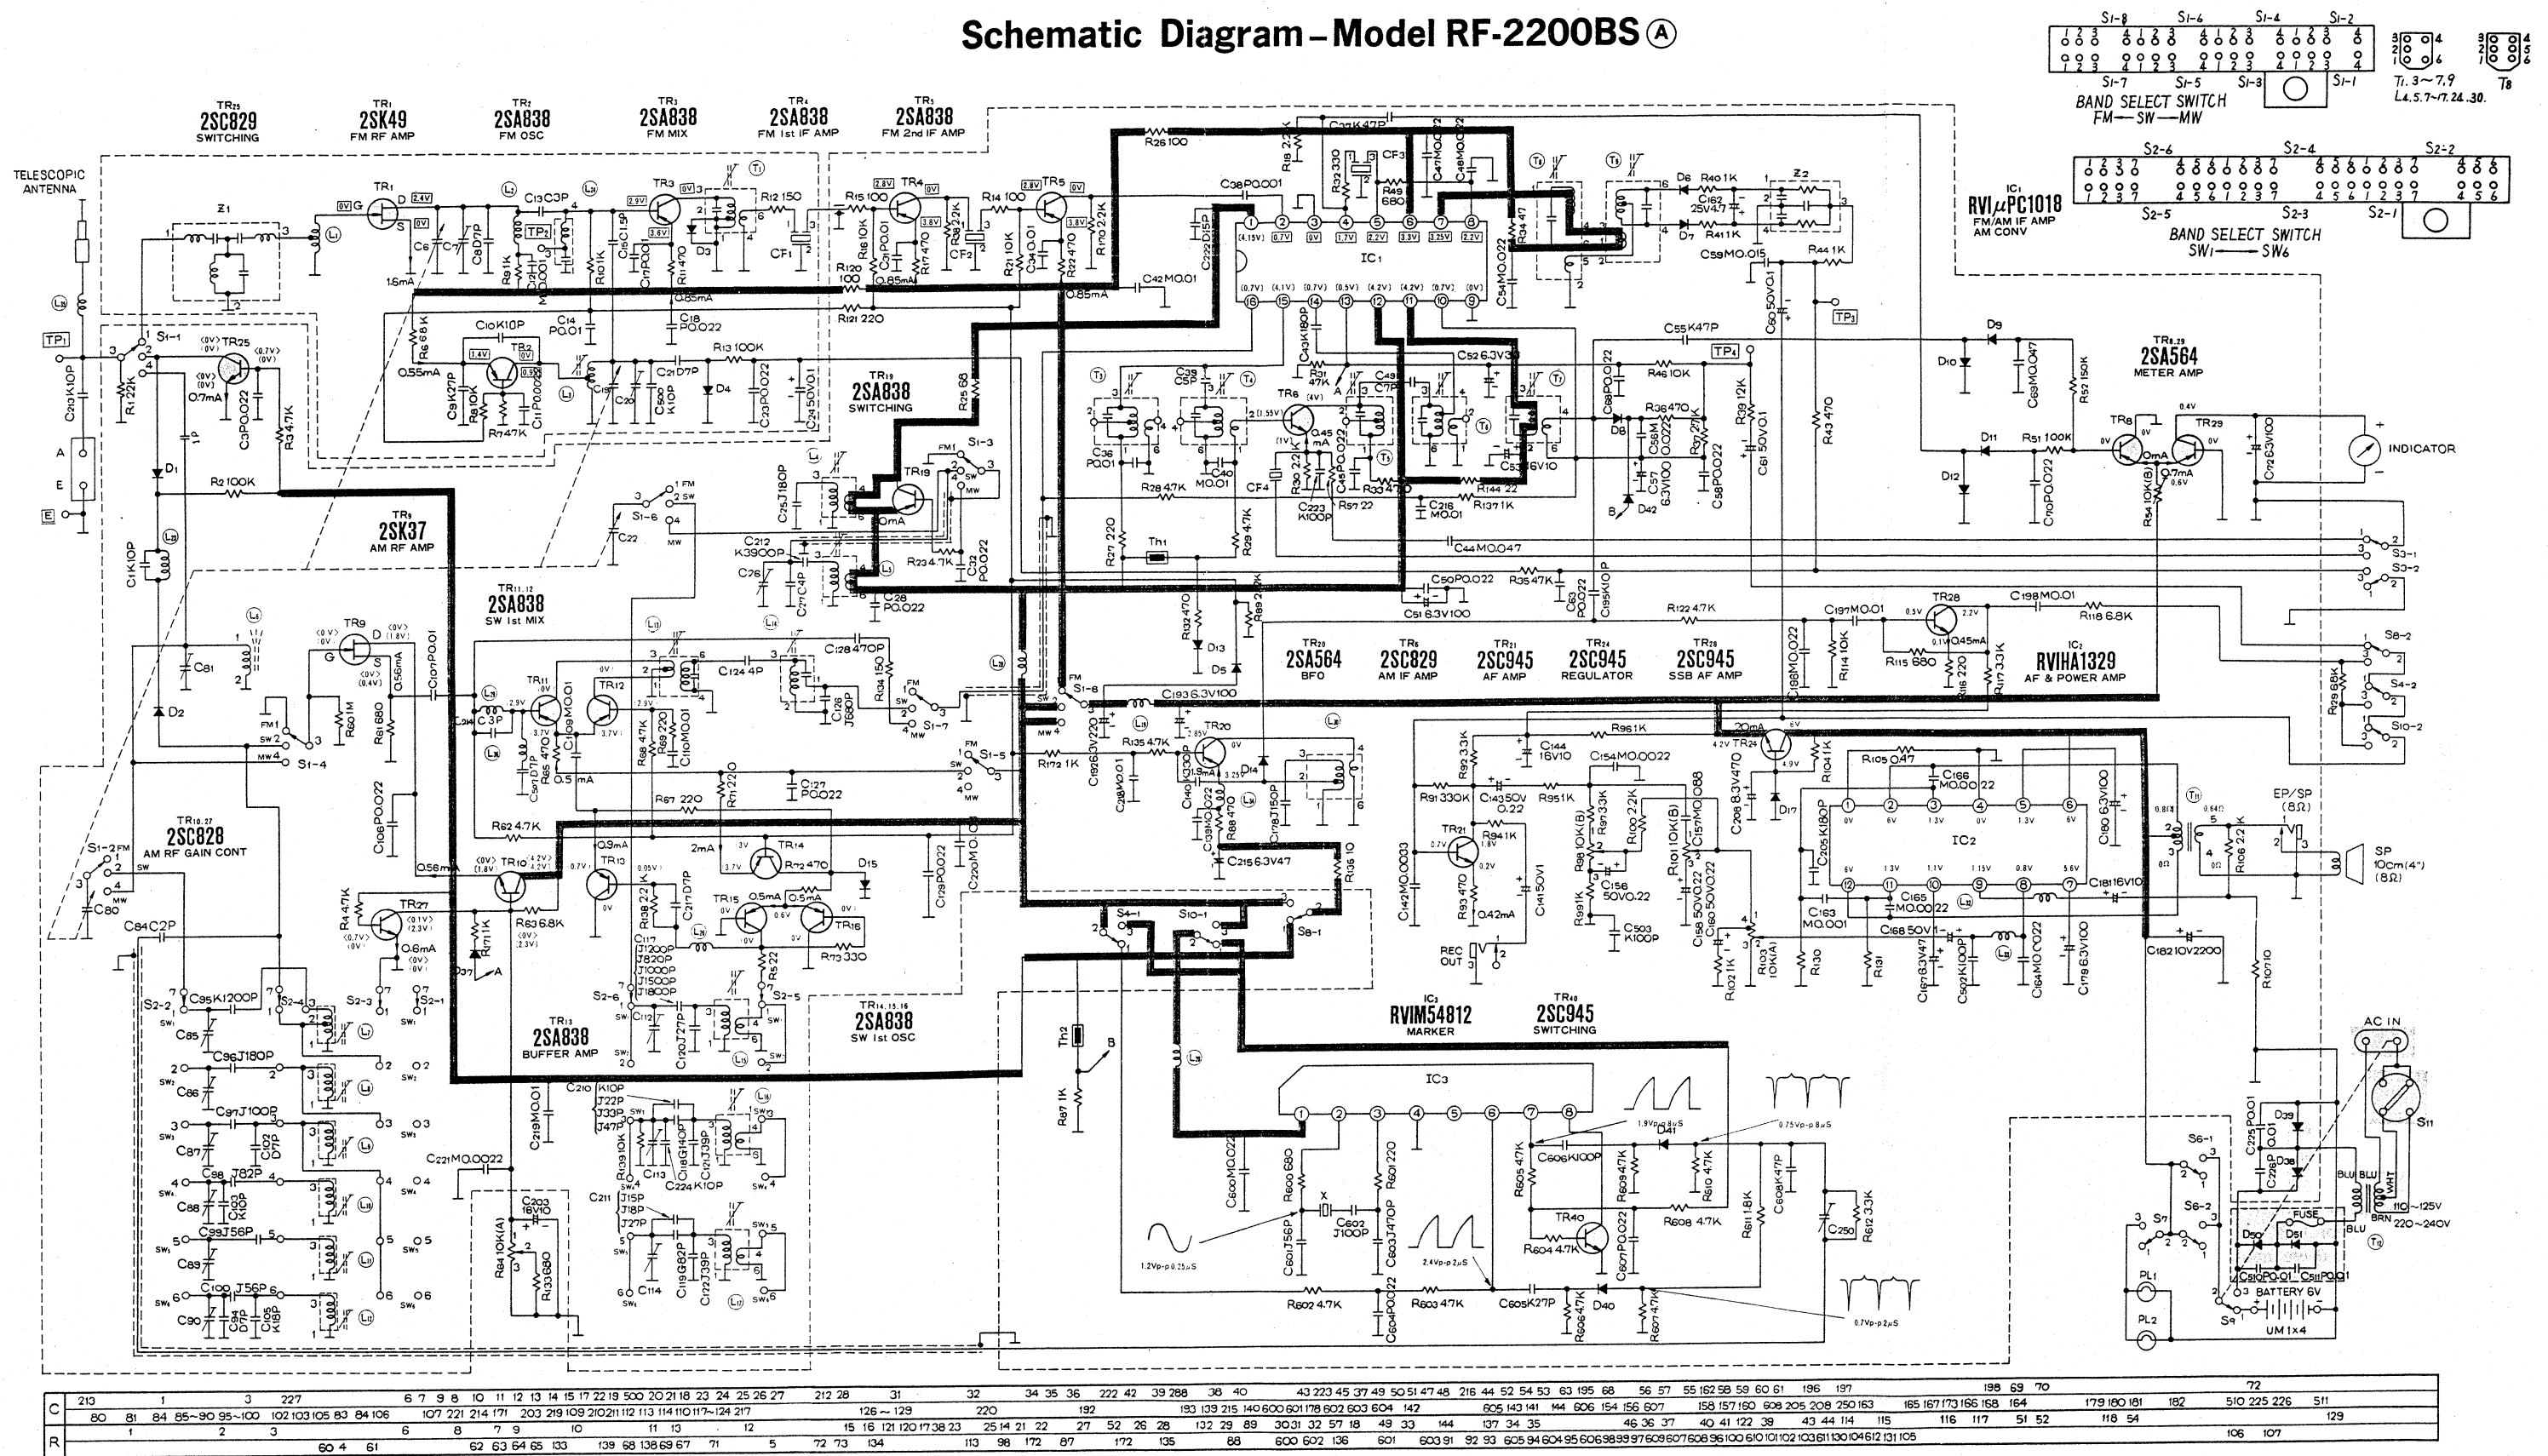

Notes:

- S1-1~S1-8: Band switch in "FM" position.
- S2-1~S2-6: SW band switch in "SW1" position.
- S3-1, S3-2: FM AFC/BAND WIDTH switch in "OFF", "NARROW" position.
- S4-1, S4-2: X-TAL MARKER/125 kHz switch in "OFF" position.
- S6-1, S6-2: Power switch in "OFF" position.
- S7: Dial Light switch in "OFF" position.
- S8-1, S8-2: BFO switch in "OFF" position.
- S9: AC-BATTERY switch in "BATTERY" position.
- S10-1, S10-2: X-TAL MARKER/500 kHz switch in "OFF" position.
- S11: Voltage selector in "110~125V" position.
- DC voltage measurements are taken with circuit tester 10kΩ/V from negative side of batteries.
- ...FM position []...MW & SW position ()...SW position < >...CAL-ON position TR20...BFO-ON position


- IC2 with B rank without R130, R131.
- IC2 with C rank R130, R131.....22 kΩ.
- IC2 with D rank R130, R131.....15 kΩ.
- Battery current: No signal 60mA
Maximum output 650mA

IMPORTANT SAFETY NOTICE

THE SHADED AREA ON THIS SCHEMATIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR SAFETY. WHEN SERVICING IT IS ESSENTIAL THAT ONLY MANUFACTURER'S SPECIFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE SHADED AREAS OF THE SCHEMATIC.

D1,2	RVDSD113	SWITCHING	D11,12	OA90	FM METER RECT
D3	RVD1K110	FM AGC	D14	RVD1K110	SSB DET
D4	RVDSD113	FM AFC	D15	RVDVD1252L	AOC
D5,13	RVDVD1250M	AOC	D17	RVDMA205	ZENER
D6,7	2-OA90	FM DET	D37,42	MA150	SWITCHING
D8	OA90	AM DET	D38,39,50,51	RVD10E1LF	RECT
D9,10	OA90	AM METER RECT	D40,41	OA90	MARKER

Circuit Board Wiring View-Model RF-2200BS(A)

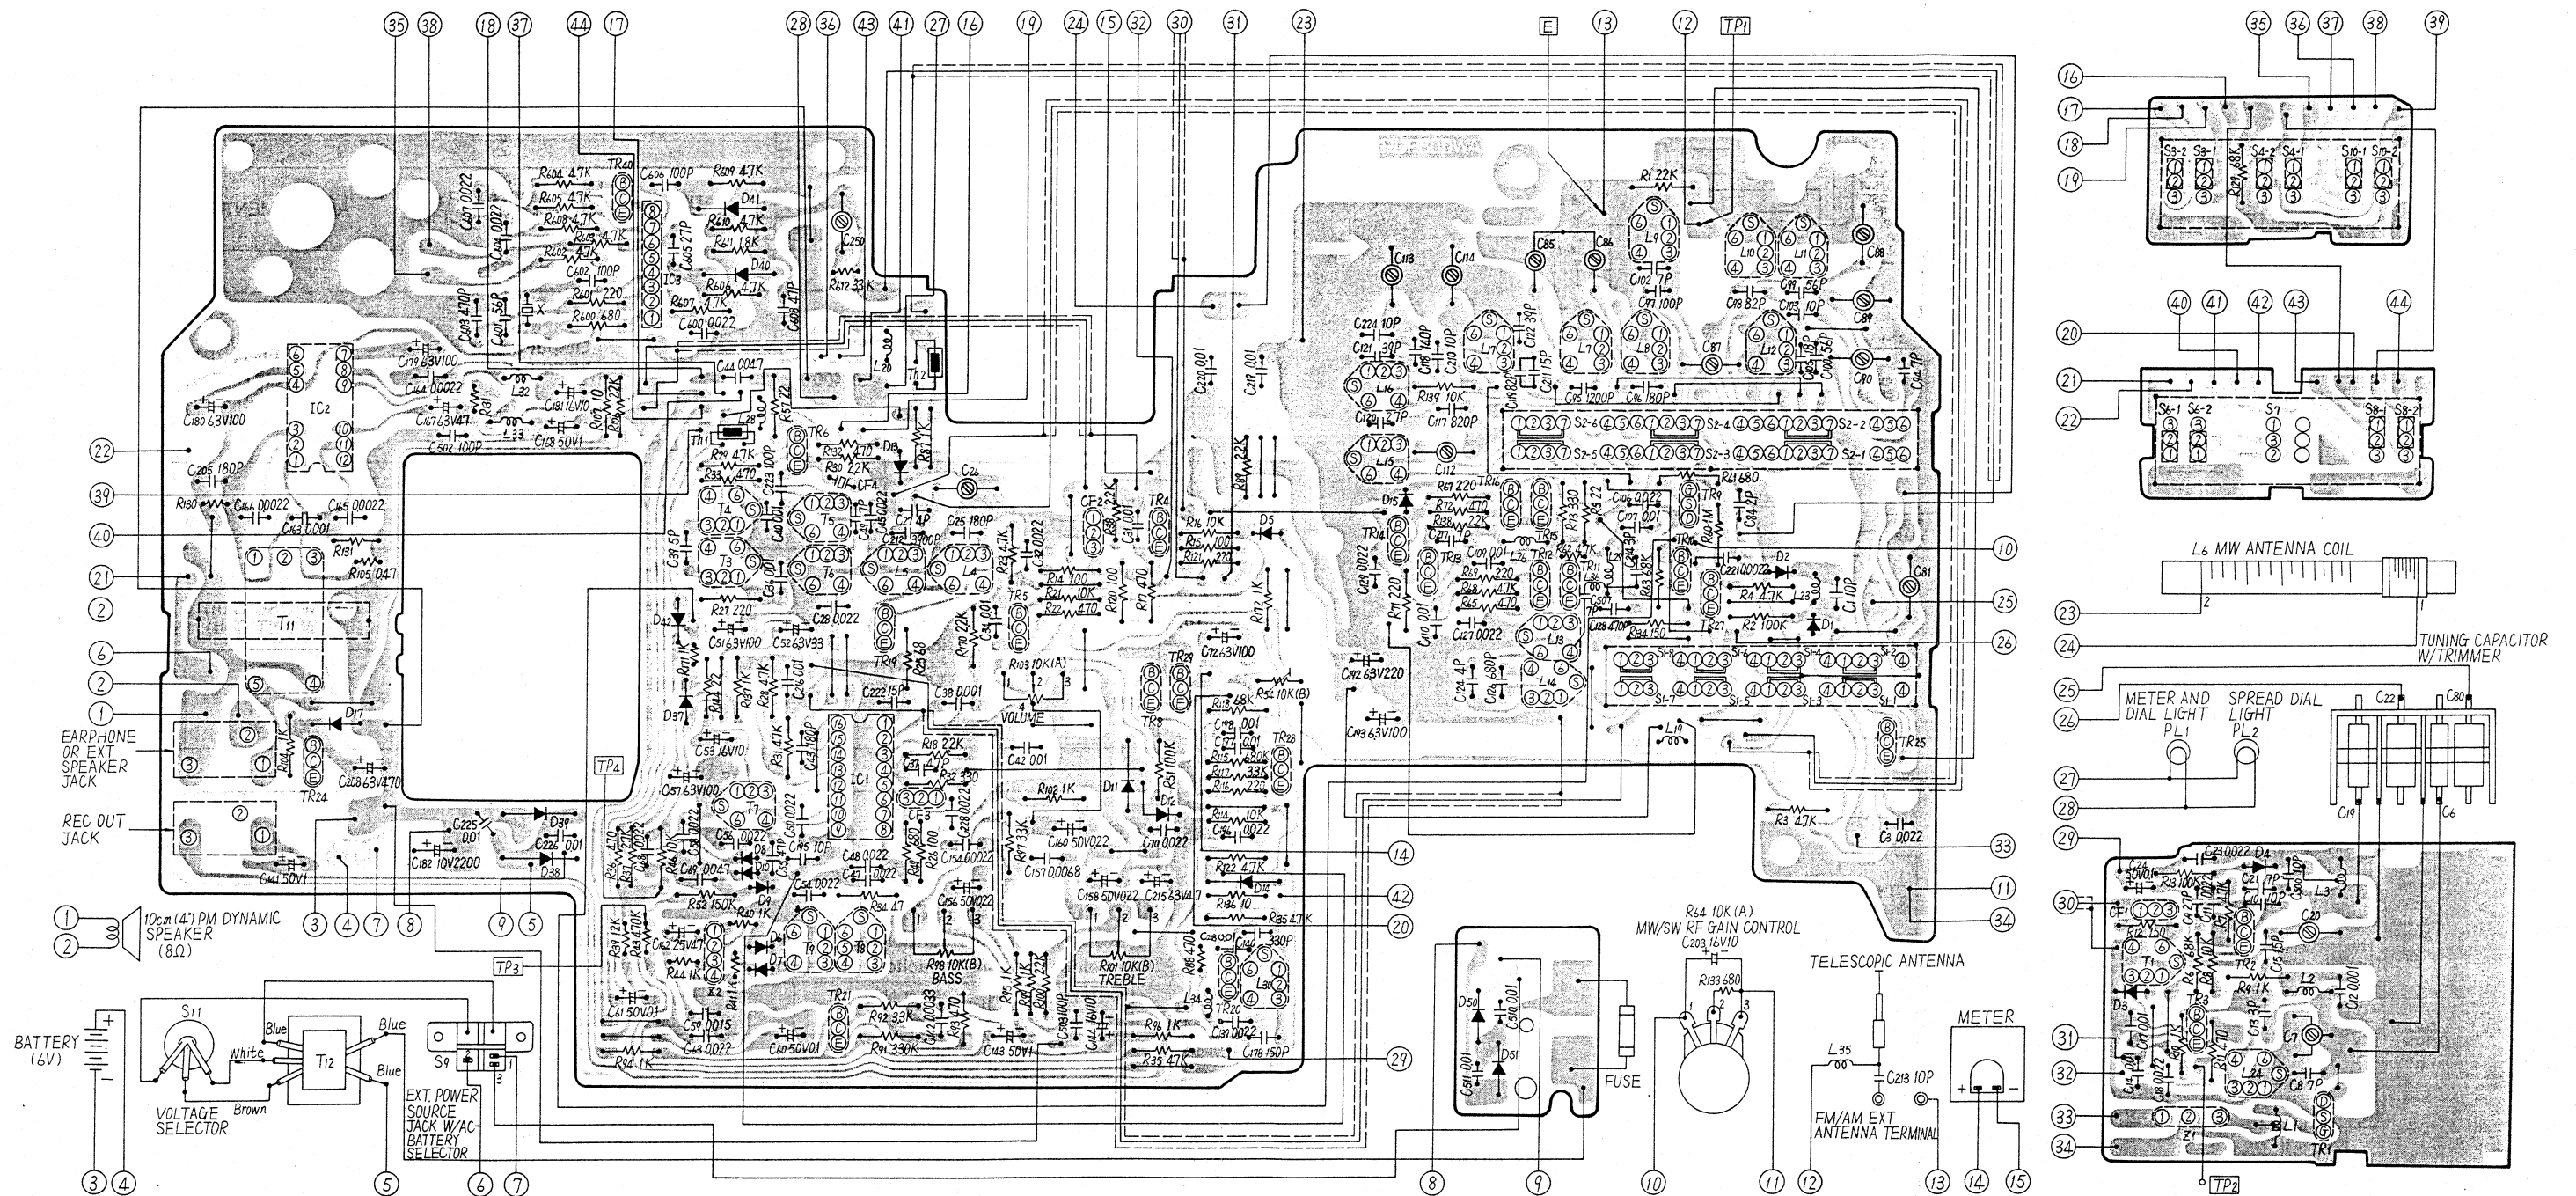

TR, D & IC	TR24, D11, IC2	D39, D38	TR40, IC3, D42, D37, D8, D10, D9, D6, D7, D40, D41, TR6, TR21, IC1, TR19, D13	TR5	D11, D12, TR8, TR4, TR29, TR20, D44, D5, TR28	TR14, D15, TR13	TR16, TR15, TR12, TR11, D50, D51	TR10, TR9, TR27, D2, D1	D3, TR3, TR2, D4, TR1
T & L	T11, T12	L33, L32	T4, T3, L28, T7, T5, T6, T9, T8, L5, L4		L34, L30	L16, L15	L17, L26, L13, L14, L7, L36, L29, L8, L9, L19	L10, L12, L11, L23, L35	T1, L6, L24, L1, L2, L3

TR1	
FM	
S	0 V
G	0 V
D	2.4 V
Ic	1.6 mA

TR2	
FM	
C	0 V
B	0.9 V
E	1.4 V
Ic	0.55 mA

TR3	
FM	
C	0 V
B	2.9 V
E	3.6 V
Ic	0.85 mA

TR4	
FM	
C	0 V
B	2.8 V
E	3.8 V
Ic	0.85 mA

TR5	
FM	
C	0 V
B	2.8 V
E	3.8 V
Ic	0.85 mA

TR6	
MW & SW	
C	4 V
B	1.55 V
E	1 V
Ic	0.45 mA

TR8	
C	0 V
B	0 V
E	0.6 V
Ic	0 mA

TR9	
MW & SW	CAL-ON
S	0.4 V
G	0 V
D	1.8 V
Ic	0.56 mA

TR10	
MW & SW	CAL-ON
C	4.2 V
B	2.3 V
E	1.8 V
Ic	0.55 mA

TR11	
SW	
C	0 V
B	2.9 V
E	3.7 V
Ic	0.5 mA

TR12	
SW	
C	0 V
B	2.9 V
E	3.7 V
Ic	0.5 mA

TR13	
SW	
C	0 V
B	0.05 V
E	0.7 V
Ic	0.9 mA

TR14	
SW	
C	1 V
B	3 V
E	3.7 V
Ic	2 mA

TR15	
SW	
C	0 V
B	0 V
E	0.6 V
Ic	0.5 mA

TR16	
SW	
C	0 V
B	0 V
E	0.6 V
Ic	0.5 mA

TR19	
C	
B	
E	
Ic	

TR20	
BFO-ON	
C	0 V
B	2.85 V
E	3.25 V
Ic	1.9 mA

TR21	
C	1.8 V
B	4.9 V
E	0.2 V
Ic	0.42 mA

TR24	
C	6 V
B	4.9 V
E	4.2 V
Ic	20 mA

TR25	
SW	CAL-ON
C	0 V
B	0 V
E	0 V
Ic	0 mA

TR27	
SW	CAL-ON
C	2.3 V
B	0 V
E	0 V
Ic	0 mA

TR28	
C	2.2 V
B	0.5 V
E	0.1 V
Ic	0.45 mA

TR29	
C	0.4 V
B	0 V
E	0.6 V
Ic	0.75 mA

IC1	
FM	
2	0.7 V
3	0 V
4	1.7 V
5	2.2 V
6	3.3 V
7	3.25 V
8	2.2 V
15	4.1 V
16	0.7 V

IC2	
1	0 V
2	6 V
3	1.3 V
4	0 V
5	1.3 V
6	6 V

D37-51,42	
Anode	Cathode

D8-12,40,41	
Anode	Cathode

D6,7	
Anode	Cathode

D1-5,13-15,17	
Anode	Cathode

D37-51,42	
Anode	Cathode

D8-12,40,41	
Anode	Cathode

D6,7	
Anode	Cathode

D1-5,13-15,17	
Anode	Cathode

■ BLOCK DIAGRAM

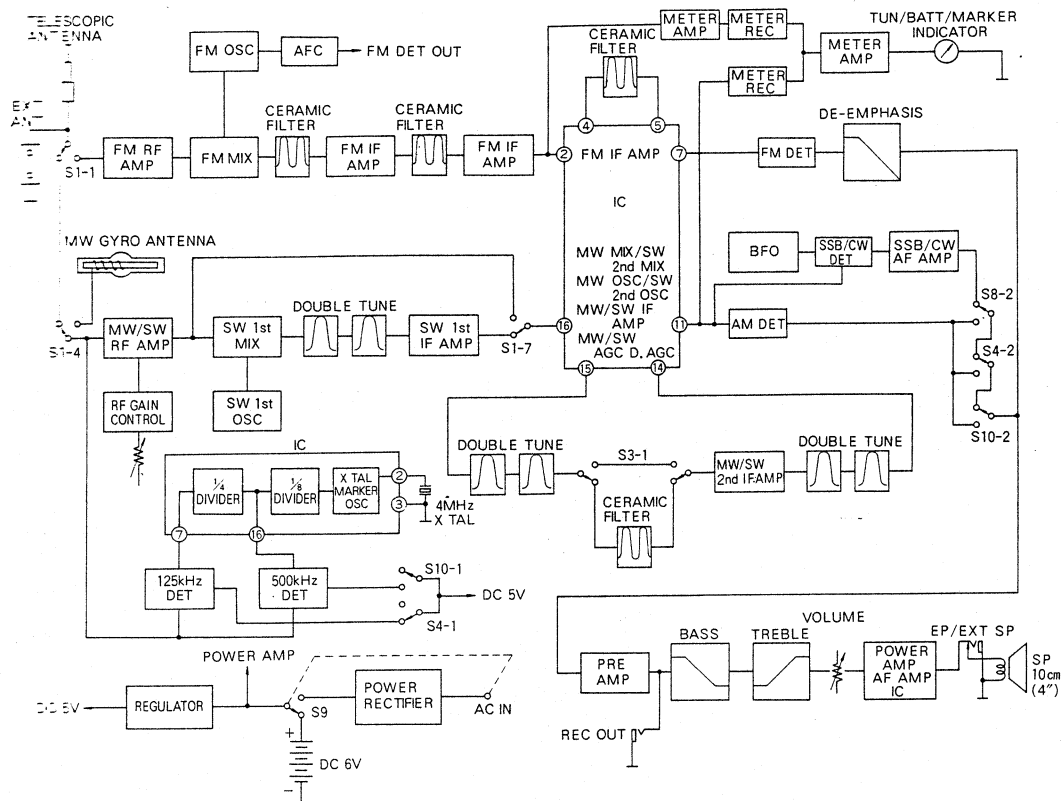


Fig. 20

■ ALIGNMENT POINTS

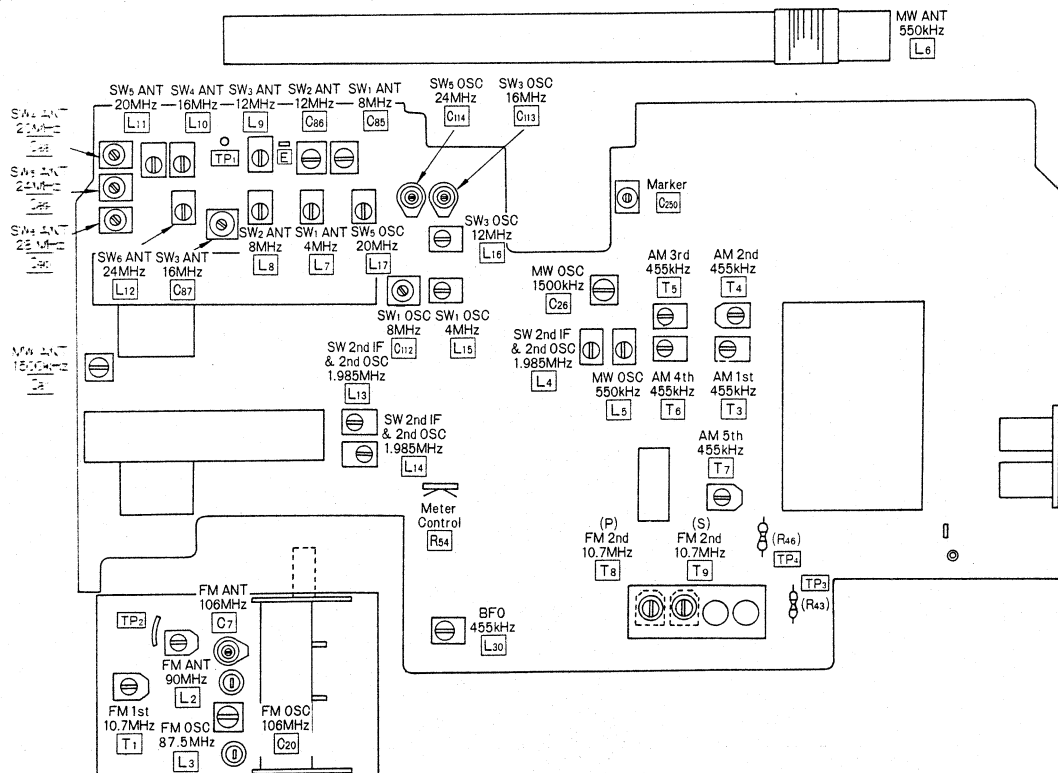


Fig. 21

■ TUNING/BATTERY/MARKER METER ADJUSTMENT

- | | |
|---|---|
| <p>1. RADIO RECEIVER SETTING</p> <ul style="list-style-type: none"> • Set band switch to MW. • Set volume control to MIN. • Set power source voltage to DC 6V. | <p>2. REMARKS</p> <ul style="list-style-type: none"> • Adjust R₅₄ so that the pointer of level meter stays as shown in fig. 22. |
|---|---|

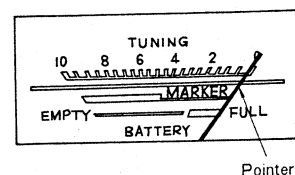


Fig. 22

■ ALIGNMENT INSTRUCTIONS

READ CAREFULLY BEFORE ATTEMPTING ALIGNMENT

1. Set volume control to maximum.
2. Set power switch to ON.
3. Set bass and treble control to maximum.
4. Set band switch to MW, SW or FM.
5. Set SW band switch to SW₁, SW₂, SW₃, SW₄, SW₅ or SW₆.
6. Set MW/SW RF gain control to high.
7. Set power source voltage to DC 6V.
8. Set FM AFC/Band width switch to narrow, OFF position for the BFO and FM adjustment, and to wide ON position for other adjustment.
9. Set X-TAL Marker switch to OFF.
10. Set BFO switch to ON position for BFO adjustment, and to OFF position for other adjustment.
11. Output of signal generator should be no higher than necessary to obtain an output reading.

■ MW, SW ALIGNMENT

BAND	SIGNAL GENERATOR or SWEEP GENERATOR		RADIO DIAL SETTING	INDICATOR (VTVM or SCOPE)	ADJUSTMENT	REMARKS
	CONNECTIONS	FREQUENCY				
AM-IF ALIGNMENT						
(1)	MW	Fashion loop of several turns of wire and radiate signal into loop of receiver.	455 kHz 30% Mod. at 400 Hz	Point of non-interference.	Output meter across voice coil.	T ₃ (AM 1st IFT) T ₄ (AM 2nd IFT) T ₅ (AM 3rd IFT) T ₆ (AM 4th IFT) T ₇ (AM 5th IFT) 1. Set band width switch to narrow and adjust for maximum output. 2. Set band width switch to wide. 3. Adjust for maximum output.
BFO ALIGNMENT						
(2)	MW	"	455 kHz	"	Audio output from speaker.	L ₃₀ (BFO OSC Coil) Adjust for zero beat.
MW-RF ALIGNMENT						
(3)	MW	"	550 kHz	550 kHz (Refer to fig.29)	Output meter across voice coil	L ₅ (MW OSC Coil) L ₆ (MW ANT Coil) Adjust for maximum output.
(4)	MW	"	1500 kHz	1500 kHz (Refer to fig.30)	"	C ₂₆ (MW OSC Trimmer) C ₈₁ (MW ANT Trimmer) Adjust for maximum output. Repeat steps (3) and (4).
SW-1st IF and 2nd OSC ALIGNMENT						
(5)	SW1	Connect to test point [TP] through ceramic capacitor (10PF). Negative side to point [E]	1.985 MHz	Point of non-interference.	"	L ₄ (2nd OSC Coil) L ₁₃ (SW 1st IF Coil) L ₁₄ (SW 1st IF Coil) Adjust for maximum output.

■ PADDING ALIGNMENT

• When you change variable capacitor please adjust as follows.

1. Solder padding capacitors at the position, as shown in fig. 25 according to the following table.

Ref. No.	Part No.	Description
C ₁₁₇ (SW ₁)	ECQS05122JZ	1200 PF, 50 WV, ±5%, Styrol
C ₂₁₀ (SW ₃)	ECMS05270JH	27 PF, 50WV, ±5%, Mica
C ₂₁₁ (SW ₅)	ECCD1H100KC	10 PF, 50WV, ±10%, Ceramic

2. Adjust the RF circuit of SW₁, SW₃ and SW₅.
3. Set 125 marker switch to ON position and then check zero beat as following frequencies.

Band	Zero Beat Frequency	Radio Dial Setting
SW ₁	6 MHz	Turn spread dial two times from 4 MHz position and set it to 0 kHz.
SW ₃	14 MHz	Turn spread dial two times from 12 MHz position and set it to 0 kHz.
SW ₅	22 MHz	Turn spread dial two times from 20 MHz position and set it to 0 kHz.

4. If there is difference between spread dial indication and the frequency of following table, please change proper capacitor.

Band	Ref. No.	Spread Dial	Part No.	Description
SW ₁	C ₁₁₇	less than 960 kHz	ECQS05821JZ	820 PF, 50WV, ±5% Styrol
		960~980 kHz	ECQS05102JZ	1000PF, 50WV, ±5%, Styrol
		20~40 kHz	ECMS05152JZ	1500PF, 50WV, ±5%, Mica
		more than 40 kHz	ECQS05182JZ	1800PF, 50WV, ±5%, Styrol
SW ₃	C ₂₁₀	less than 960 kHz	ECCE1H100KC	10PF, 50WV, ±10%, Ceramic
		960~980 kHz	ECMS05220JH	22PF, 50WV, ±5%, Mica
		20~40 kHz	ECMS05330JH	33PF, 50WV, ±5%, Mica
		more than 40 kHz	ECMS05470JH	47PF, 50WV, ±5%, Mica
SW ₅	C ₂₁₁	less than 920 kHz	ECCD1H040C	4PF, 50WV, ±0.25PF, Ceramic
		920~960 kHz	ECCD1H070DC	7PF, 50WV, ±0.5PF, Ceramic
		40~80 kHz	ECMS05150JH	15PF, 50WV, ±5%, Mica
		more than 80 kHz	ECMS05180JH	18PF, 50WV, ±5%, Mica

SW RF ALIGNMENT

SW1-RF ALIGNMENT							
BAND	SIGNAL GENERATOR or SWEEP GENERATOR		RADIO DIAL SETTING	INDICATOR (VTVM or SCOPE)	ADJUSTMENT	REMARKS	
	CONNECTIONS	FREQUENCY					
SW1-RF ALIGNMENT							
(1)	SW1	Connect to test point [TP] through ceramic capacitor (10PF). Negative side to point [E]	4 MHz	4 MHz Refer to note 1.	Output meter across voice coil.	L ₁₅ (SW1 OSC Coil) L ₇ (SW1 ANT Coil)	Adjust for maximum output.
(2)	SW1	"	8 MHz	8 MHz Refer to note 2.	"	C ₁₁₂ (SW1 OSC Trimmer) C ₈₅ (SW1 ANT Trimmer)	Adjust for maximum output. Repeat steps (1) and (2).
SW2-RF ALIGNMENT							
(3)	SW2	"	8 MHz	8 MHz Refer to note 1.	"	L ₈ (SW2 ANT Coil)	Adjust for maximum output.
(4)	SW2	"	12 MHz	12 MHz Refer to note 2.	"	C ₈₆ (SW2 ANT Trimmer)	Adjust for maximum output. Repeat steps (3) and (4).
SW3-RF ALIGNMENT							
(5)	SW3	"	12 MHz	12 MHz Refer to note 1.	"	L ₁₆ (SW3 OSC Coil) L ₉ (SW3 ANT Coil)	Adjust for maximum output.
(6)	SW3	"	16 MHz	16 MHz Refer to note 2.	"	C ₁₁₃ (SW3 OSC Trimmer) C ₈₇ (SW3 ANT Trimmer)	Adjust for maximum output. Repeat steps (5) and (6).
SW4-RF ALIGNMENT							
(7)	SW4	"	16 MHz	16 MHz Refer to note 1.	"	L ₁₀ (SW4 ANT Coil)	Adjust for maximum output.
(8)	SW4	"	20 MHz	20 MHz Refer to note 2.	"	C ₈₈ (SW4 ANT Trimmer)	Adjust for maximum output. Repeat steps (7) and (8).
SW5-RF ALIGNMENT							
(9)	SW5	"	20 MHz	20 MHz Refer to note 1.	"	L ₁₇ (SW5 OSC Coil) L ₁₁ (SW5 ANT Coil)	Adjust for maximum output.
(10)	SW5	"	24 MHz	24 MHz Refer to note 2.	"	C ₁₁₄ (SW6 OSC Trimmer) C ₈₉ (SW5 ANT Trimmer)	Adjust for maximum output. Repeat steps (9) and (10).
SW6-RF ALIGNMENT							
(11)	SW6	"	24 MHz	24 MHz Refer to note 1.	"	L ₁₂ (SW6 ANT Coil)	Adjust for maximum output.
(12)	SW6	"	28 MHz	28 MHz Refer to note 2.	"	C ₉₀ (SW6 ANT Trimmer)	Adjust for maximum output. Repeat steps (11) and (12).

Notes:

1. Set tuning capacitor to maximum capacity (minimum frequency), tuning knob to fully counter-clockwise, spread dial to 435 kHz, as shown in fig. 23. Then set tuning knob to clockwise and set spread dial to 0 kHz, as shown in fig. 24.

2. Set spread dial to 0 kHz by turning 4 times to clockwise from the position of note 1.

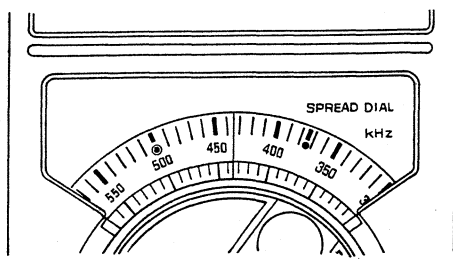


Fig. 23

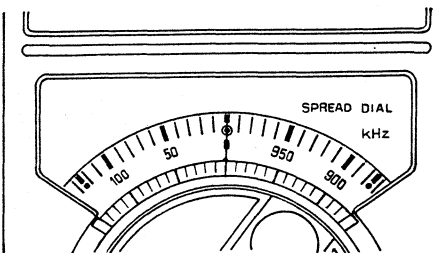


Fig. 24

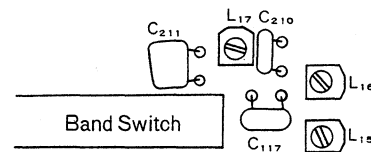


Fig. 25

MARKER ALIGNMENT

1. Set trimmer capacitor (C₂₅₀) to maximum capacity.
2. Check zero beat at the position of 24 MHz (SW₅).
3. Set 125, 500 kHz marker to ON. For the image beat of 24.03 MHz, set spread dial to 24.03 MHz and adjust C₂₅₀ so that the meter indicates 4 scale or less.

FM ALIGNMENT INSTRUCTIONS

SIGNAL GENERATOR or SWEEP GENERATOR		RADIO DIAL SETTING	INDICATOR (VTVM or SCOPE)	ADJUSTMENT	REMARKS
CONNECTIONS	FREQUENCY				
FM-IF ALIGNMENT					
High side thru. 0.001 μ F to point TP₂ . Negative side to point E .	10.7 MHz (400 kHz SWP.)	Point of non-interference. (on/about 90 MHz).	Connect vert. amp. of scope to point TP₃ . Negative side to point E .	T ₁ (FM 1st IFT) T ₈ (FM 2nd IFT) (Primary)	Adjust for maximum amplitude. (Refer to fig. 26).
"	"	"	"	T ₉ (FM 2nd IFT) (Secondary)	Adjust for maximum amplitude. (Refer to fig. 27).
FM-RF ALIGNMENT					
Connect to test point TP₁ through FM dummy antenna. Negative side to point E . (Refer to fig. 28).	87.5 MHz	Variable capacitor fully closed.	Output meter across voice coil.	L ₃ (FM OSC Coil)	Adjust for maximum output.
"	90 MHz	90 MHz (Refer to fig. 31)	"	L ₂ (FM Tuning Coil)	Adjust for maximum output.
"	106 MHz	106 MHz (Refer to fig. 32)	"	C ₂₀ (FM OSC Trimmer) C ₇ (FM ANT Trimmer)	Adjust for maximum output. Repeat steps (3) and (4).

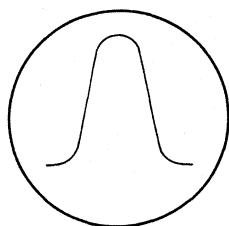


Fig. 26

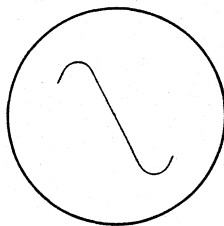


Fig. 27

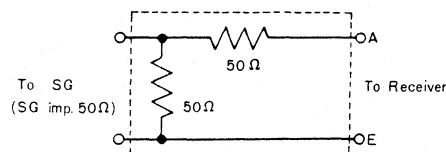


Fig. 28 FM Dummy Antenna

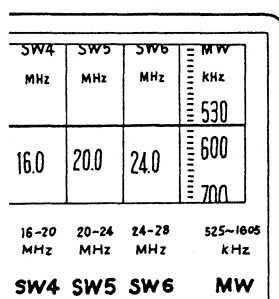


Fig. 29 550 kHz

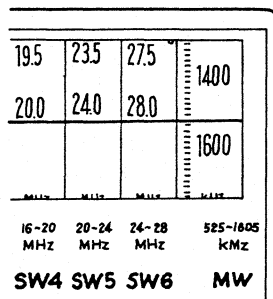


Fig. 30 1500 kHz

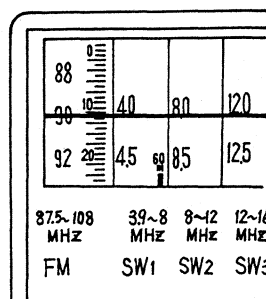


Fig. 31 90 MHz


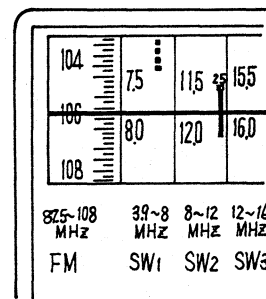


Fig. 32 106 MHz

■ CABINET PARTS LOCATION

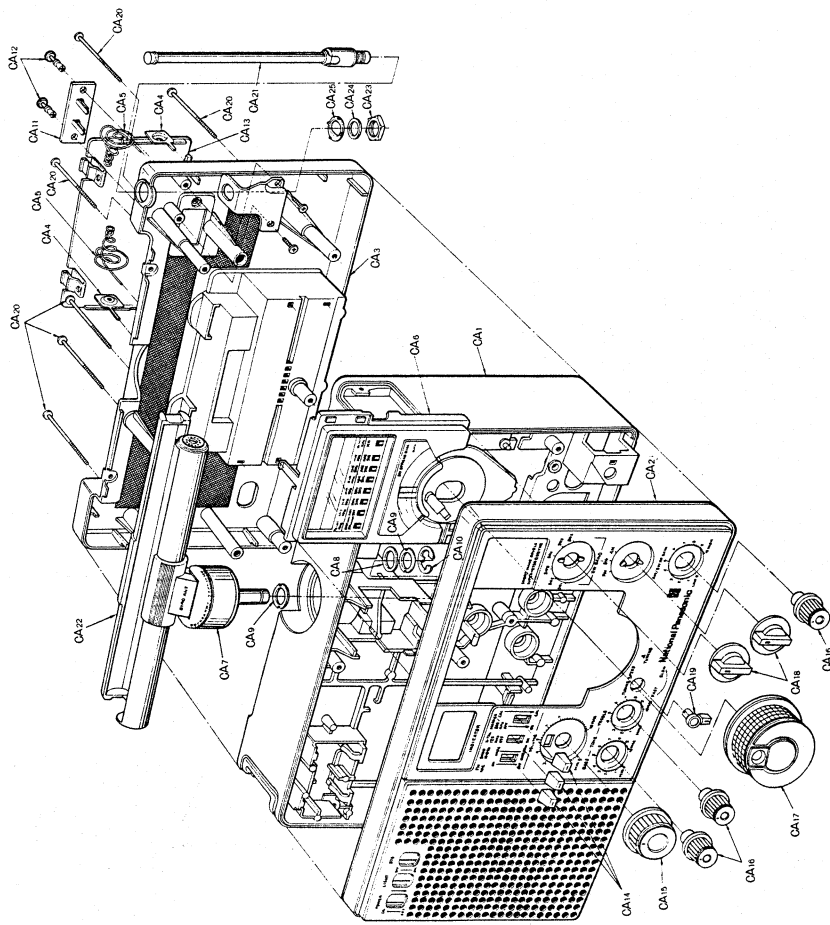

■ CHASSIS PARTS LOCATIONS

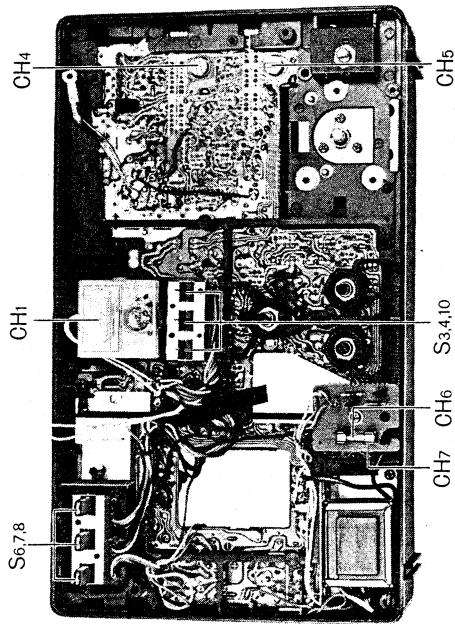


Fig. 36

■ PACKING MATERIALS AND ACCESSORIES

Fig. 33

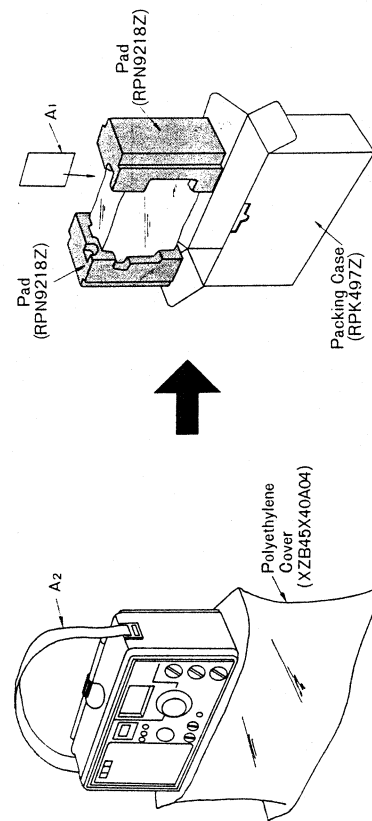


Fig. 34

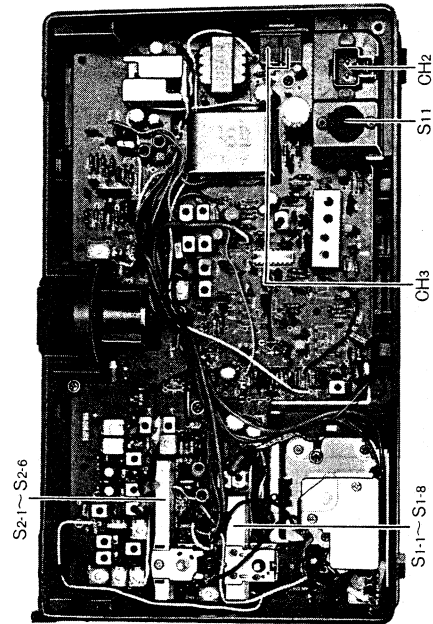


Fig. 37

■ DIAL DRIVE ASSEMBLY PARTS LOCATIONS

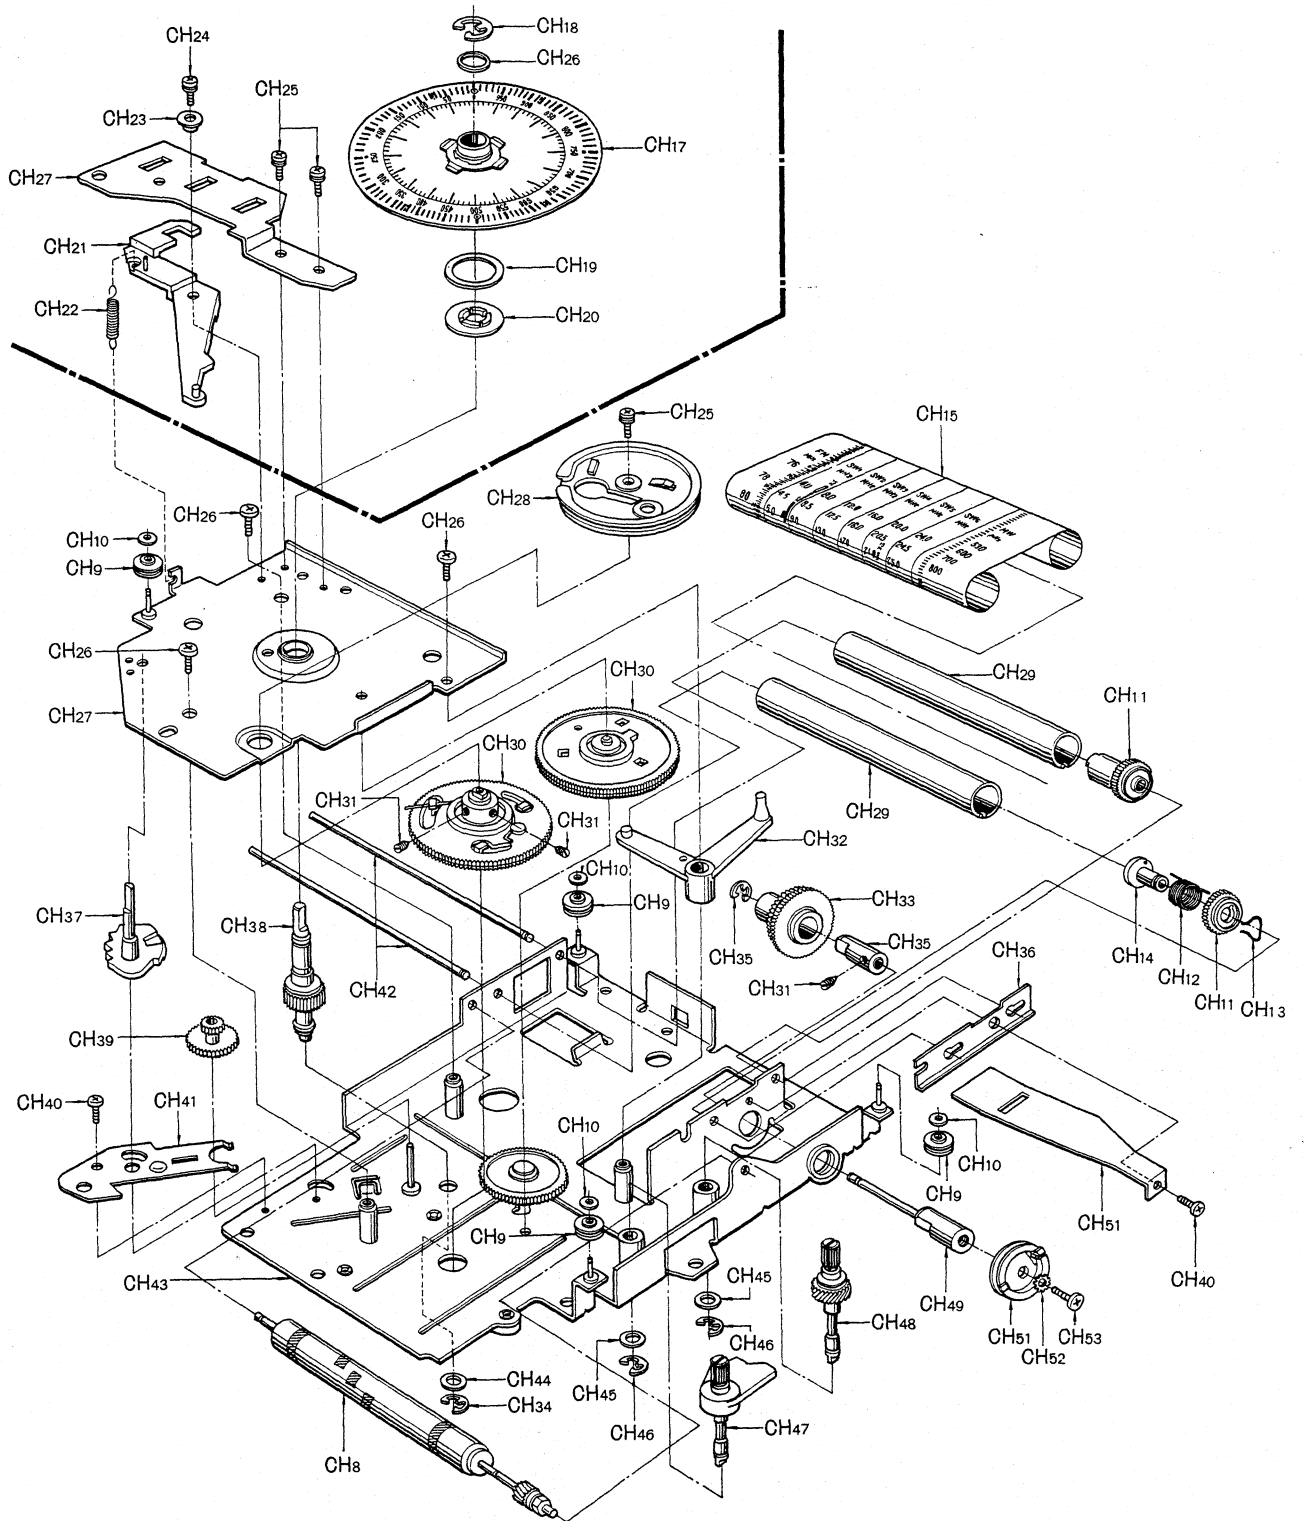


Fig. 38

Ref. No.	Part No.	Part Name & Description	Per Set	Remarks
SPEAKER				
SP	EAS10P57SA	Speaker, Imp.8Ω, PM Dynamic	1	X
SWITCHES				
S1-1~S1-8	RSR3H02Z-H	Switch, Band	1	X
S2-1~S2-6	RSR6F01Z-P	Switch, SW Band	1	X
S3,4,10	RSTX003Z-A	Switch, FM AFC, X-TAL MARKER	1	X
S6,7,8	RSTX002Z-M	Switch, Power, Light, BFO	1	X
S11	RSR2A01Z-H	Switch, Voltage Selector	1	X
RESISTORS				
R27,67,69,71,116,121,601	ERD25TJ221	220Ω, $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	7	Z
R11,17,22,33,36,65,72,88,93,132	ERD25TJ471	470Ω, $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	10	Z
R49,61,600	ERD25TJ681	680Ω, $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	3	Z
R14,15,26,120	ERD25TJ101	100Ω, $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	4	Z
R9,10,40,41,44,87,94,95,96,99,102,104,137,171,172	ERD25TJ102	1KΩ, $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	15	Z
R3,4,7,23,28,29,62,68,122,135,602,603,604,605	ERD25TJ472	4.7KΩ, $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	14	Z
R8,16,21,46,114,139	ERD25TJ103	10KΩ, $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	6	Z
R130,131	ERD25TJ153	15KΩ, $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	2	Z
R1,130,131	ERD25TJ223	22KΩ, $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	3	Z
R31,35	ERD25TJ473	47KΩ, $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	2	Z
R107,136	ERD25TJ100	10Ω, $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	2	Z
R5,57,144	ERD25TJ220	22Ω, $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	3	Z
R34	ERD25TJ470	47Ω, $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	1	Z
R25	ERD25TJ680	68Ω, $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	1	Z
R12,134	ERD25TJ151	150Ω, $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	2	Z
R32,73	ERD25TJ331	330Ω, $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	2	Z
R18,30,38,89,100,106,138,170	ERD25TJ222	2.2KΩ, $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	8	Z
R37	ERD25TJ272	2.7KΩ, $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	1	Z
R92,97,117,612	ERD25TJ332	3.3KΩ, $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	4	Z
R6,63,118	ERD25TJ682	6.8KΩ, $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	3	Z
R129	ERD25TJ683	68KΩ, $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	1	Z
R39	ERD25TJ123	12KΩ, $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	1	Z
R52	ERD25TJ154	150KΩ, $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	1	Z
R2,13,51	ERD25TJ104	100KΩ, $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	3	Z
R91	ERD25TJ334	330KΩ, $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	1	Z
R43	ERD25TJ474	470KΩ, $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	1	Z
R115	ERD25TJ684	680KΩ, $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	1	Z

Ref. No.	Part No.	Part Name & Description	Per Set	Remarks
R60	ERD25TJ105	1MΩ, $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	1	Z
R105	ERX1ANJR47U	0.47Ω, 1Watt, $\pm 5\%$, Metal Oxide	1	Z
R133	ERD25TJ681	680Ω, $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	1	Z
R611	ERD25TJ182	1.8KΩ, $\frac{1}{2}$ Watt, $\pm 5\%$, Carbon	1	Z
CAPACITORS				
C15	ECCD1H1R5C	1.5PF, 50WV, ± 0.25 PF, Ceramic	1	Z
C84	ECCD1H020C	2PF, 50WV, ± 0.25 PF, Ceramic	1	Z
C13,214	ECCD1H030C	3PF, 50WV, ± 0.25 PF, Ceramic	2	Z
C124,211	ECCD1H040C	4PF, 50WV, ± 0.25 PF, Ceramic	2	Z
C27,39	ECCD1H050CC	5PF, 50WV, ± 0.25 PF, Ceramic	2	Z
C8,21,49,94,102,217,507	ECCD1H070DC	7PF, 50WV, ± 0.5 PF, Ceramic	7	Z
C1,103,110,195,213,500	ECCD1H100KC	10PF, 50WV, $\pm 10\%$, Ceramic	6	Z
C10,222	ECCD1H150KC	15PF, 50WV, $\pm 10\%$, Ceramic	2	Z
C105	ECCD1H180KC	18PF, 50WV, $\pm 10\%$, Ceramic	1	Z
C9,152,605	ECCD1H270KC	27PF, 50WV, $\pm 10\%$, Ceramic	3	Z
C37,55,608	ECCD1H470KC	47PF, 50WV, $\pm 10\%$, Ceramic	3	Z
C38	ECKD1H102ZF	0.001μF, 50WV, $\pm 28\%$, Ceramic	1	Z
C210,223,502,503,606	ECCD1H101K	100PF, 50WV, $\pm 10\%$, Ceramic	5	Z
C43,205	ECCD1H181K	180PF, 50WV, $\pm 10\%$, Ceramic	2	Z
C140	ECKV1H331KB	330PF, 50WV, $\pm 10\%$, Ceramic	1	Z
C122	ECCD1H390JU	39PF, 50WV, $\pm 5\%$, Ceramic	1	Z
C11,14,17,107,225,510,511	ECKV1H103ZF	0.01μF, 50WV, $\pm 28\%$, Ceramic	7	Z
C31,34,36,226	ECKT1H103ZF	0.01μF, 50WV, $\pm 28\%$, Ceramic	4	Z
C18,23,32,45,68,127	ECKV1H223ZF	0.022μF, 50WV, $\pm 28\%$, Ceramic	6	Z
C3,28,50,58,63,70,106,129,604,607	ECKT1H223ZF	0.022μF, 50WV, $\pm 28\%$, Ceramic	9	Z
C128	ECKD1H471MD	470PF, 50WV, $\pm 20\%$, Ceramic	1	Z
C12,163	ECKD1H102MD	0.001μF, 50WV, $\pm 20\%$, Ceramic	2	Z
C11,154,165,166,164,221	ECKD1H222MD	0.0022μF, 50WV, $\pm 20\%$, Ceramic	6	Z
C142	ECKD1H332MD	0.0033μF, 50WV, $\pm 20\%$, Ceramic	1	Z
C157	ECKD1H682MD	0.0068μF, 50WV, $\pm 20\%$, Ceramic	1	Z
C40,42,109,110,197,198,216,218,219,220	ECKD1H103MD	0.01μF, 50WV, $\pm 20\%$, Ceramic	10	Z
C120	ECMS05270JH	27PF, 50WV, $\pm 5\%$, Mica	1	Z
C121	ECMS05390JH	39PF, 50WV, $\pm 5\%$, Mica	1	Z
C99,100,601	ECMS05560JH	56PF, 50WV, $\pm 5\%$, Mica	3	Z
C98	ECMS05820JH	82PF, 50WV, $\pm 5\%$, Mica	1	Z
C97,602	ECMS05101JH	100PF, 50WV, $\pm 5\%$, Mica	2	Z
C25,96	ECMS05181JH	180PF, 50WV, $\pm 5\%$, Mica	2	Z
C119	ECMS05820GH	82PF, 50WV, $\pm 2\%$, Mica	1	Z
C118	ECMS05141GH	140PF, 50WV, $\pm 2\%$, Mica	1	Z
C211	ECMS05120JH	12PF, 50WV, $\pm 5\%$, Mica	1	Z
C126	ECQS05102JZ	1000PF, 50WV, $\pm 5\%$, Styrol	1	Z

REPLACEMENT PARTS LIST.....Model RF-2200BS(A) (RD7703-1452)

NOTES: 1.Part numbers are indicated on most mechanical parts.
Please use this part number for parts orders.
2.X-Z rank: X rank parts will cover 80% of repair needs.
X+Y rank parts will cover 95% of repair needs.
Z rank parts are less necessary.
3.Components identified by shaded area have special characteristic important for safety. When replacing any of these components use only manufacturer's special parts.
4.Part numbers shown in bold letters are service standard parts and may differ from production parts.
5.The O mark is used by the manufacturing plant only.

Ref. No.	Part No.	Part Name & Description	Per Set	Remarks
INTEGRATED CIRCUITS, TRANSISTORS AND DIODES				
IC1	RVI _μ PC1018	IC, FM/AM IF AMP, AM Converter	1	X
IC2	RVIHA1329	IC, AF & Power Amp.	1	X
IC3	RVM54812	IC, Marker	1	OX
TR1	2SK49	Transistor(Si), FM RF Amp.	1	X
TR2,3,4,5,11, 12,13,14, 15,16,19	2SA838	Transistor(Ge), FM OSC, FM MIX, FM IF AMP, SW MIX, Buffer Amp., SW OSC, Switching	11	X
TR6,25	2SC829	Transistor(Si), AM IF Amp., Switching	2	X
TR8,20,29	2SA564	Transistor(Ge), Meter AMP., BFO	3	X
TR9	2SK104	Transistor(Si), AM RF AMP.	1	OX
TR10,27	2SC828	Transistor(Si), AM RF Gain Control	2	X
TR21,24,28, 40	2SC945	Transistor(Si), AF Amp., Regulator, SSB AF Amp., Switching	4	X
D1,2,4	RVDSD113	Diode(Si), FM AGC, Switching	3	X
D3,14	RVD1K110	Diode(Si), FM AGC, SSB Det.	2	X
D5,13	RVDVD1250M	Diode(Si), Operation Compensator	2	X
D6,7	2-OA90	Diode(Ge), FM Detector	2	X
D8,9,10,11,12, 40,41	OA90	Diode(Ge), Detector, AM Meter Rect. Marker	7	X
D15	RVDVD1252L	Diode(Si), Operation Compensator	1	X
D17	RVDMZA205	Diode(Si), Zener	1	X
D37,42	MA150	Diode(Si), Switching	2	X
D38,39,50,51	RVD10E1LF	Diode(Si), Rectifier	4	X
CRYSTAL AND THERMISTORS				
X1	RVCX4000Q5Z	Crystal	1	X
Th1,2	RRT262	Temperature Compensator	2	X
CERAMIC FILTERS, COILS AND TRANSFORMERS				
CF1,2,3	RVF107MFR	Ceramic Filter	3	X
CF4	RVFBFB455C1	Ceramic Filter	1	X
L1	RLA4Y6	Antenna Coil, FM	1	X

Ref. No.	Part No.	Part Name & Description	Per Set	Remarks
L2	RLD4N33	Coil, Tuning	1	X
L3	RLO4N95	Oscillator Coil, FM(RLO4N27-O)	1	X
L4	RLO9M4	Oscillator Coil, 2nd Local	1	X
L5	RLO2M16	Oscillator Coil, MW	1	X
L6	RLF2G38	Antenna Coil, MW	1	X
L7	RLA3M19	Antenna Coil, SW1	1	X
L8	RLA3M20	Antenna Coil, SW2	1	X
L9	RLA3M21	Antenna Coil, SW3	1	X
L10	RLA3M22	Antenna Coil, SW4	1	X
L11	RLA3M23	Antenna Coil, SW5	1	X
L12	RLA3M24	Antenna Coil, SW6	1	X
L13	RLI9M3	IFT, SW 2nd IF	1	X
L14	RLI9M4	IFT, SW 2nd IF	1	X
L15	RLO3M37	Oscillator Coil, SW1	1	X
L16	RLO3M38	Oscillator Coil, SW3	1	X
L17	RLO3M39	Oscillator Coil, SW5,6	1	X
L24	RLI4M103	Coil, IF Trap	1	X
L30	RLO9M5	Oscillator Coil, BFO	1	X
T1	RLI4M101	IFT, FM 1st	1	X
T3,5	RLI2M212	IFT, AM 1st, 3rd(RLI2M212-K)	2	X
T4,6	RLI2M208	IFT, AM 2nd, 4th	2	X
T7	RLI2M402	IFT, AM 5th	1	X
T8	RLI4M504	IFT, FM 2nd(Primary)	1	X
T9	RLI4M506	IFT, FM 2nd(Secondary)	1	X
T11	RLT2H32	Output Transformer, P=20Ω:S=8Ω (RLT2H32-V, RLT2H32-W)	1	X
T12	RLT5J199	Power Transformer	1	X
VARIABLE RESISTORS				
R64	EVHCGMA095A14	10KΩ(A), RF Gain Control	1	X
R103	EVH8XAF25A14	10KΩ(A), Volume Control	1	X
R98,101	EVH7XAF25B14	10KΩ(B), Tone Control	2	X
R54	EVLTOAA00B14	10KΩ(B), Pre Set, Meter Control	1	Y
VARIABLE CAPACITORS				
C6,9,22,80	RCVCV45D112	Tuning Capacitor	1	Y
C85,86	RCVCTY21D17	Trimmer Capacitor	1	Y
C20,26,81, 250	RCV1PX15AG	Trimmer Capacitor	4	Y
C87,88,89,90	RCV1PX20AG	Trimmer Capacitor	4	Y
C112,113,114	RCV1PX30AG	Trimmer Capacitor	3	Y
C7	ECV1ZW10×32	Trimmer Capacitor	1	Y
COMPONENT COMBINATIONS				
Z1	RXABPF10801H	Component Combination, Coils & Capacitors	1	Y
Z2	EXA5DLO4C	Component Combination, 330PF×3, 4.7KΩ×2	1	Y

Ref. No.	Part No.	Part Name & Description	Per Set	Remarks
C95	ECQS05122KZ	1200PF, 50WV,±10%, Styrol	1	Z
C212	ECQS05392KZ	3900PF, 50WV,±10%, Styrol	1	Z
C178	ECQS1151JZ	150PF, 50WV,±5%, Styrol	1	Z
C117	ECQS05821JZ	820PF, 50WV,±5%, Styrol	1	Z
C59	ECFVD153MD	0.015μF, 50WV,±20%, Semi-Conductor	1	Z
C47,54,56, 196,228	ECFVD223MD	0.022μF, 50WV,±20%, Semi-Conductor	5	Z
C44	ECFTD473MD	0.047μF, 50WV,±20%, Semi-Conductor	1	Z
C69	ECFVD473MD	0.047μF, 50WV,±20%, Semi-Conductor	1	Z
C48,139,600	ECFTD223MD	0.022μF, 50WV,±20%, Semi-Conductor	3	Z
C52	ECEA16V33	33μF, 16WV, Electrolytic	1	Y
C167,215	ECEA16V47	47μF, 16WV, Electrolytic	2	Y
C51,57,72, 179,180,193	ECEA10V100	100μF, 10WV, Electrolytic	6	Y
C208	ECEA6V470	470μF, 6.3WV, Electrolytic	1	Y
C192	ECEA6V220	220μF, 6.3WV, Electrolytic	1	Y
C603	ECQS05471JZ	470PF, 50WV,±5%, Ceramic	1	Z
C182	ECEA10V2200	2200μF, 10WV, Electrolytic	1	Y
C53,144,181, 203	ECEA16V10	10μF, 16WV, Electrolytic	4	Y
C162	ECEA35V4R7B	4.7μF, 35WV, Electrolytic	1	Y
C24,60,61	ECEA50ZR1E	1μF, 50WV, Electrolytic	3	Y
C143,156,158 160	ECEA50ZR22	0.22μF, 50WV, Electrolytic	4	Y
C141,168	ECEA50V1	1μF, 50WV, Electrolytic	2	Y
CABINET				
CA1	RYMF2200BSXG	Cabinet Assembly	1	X
CA2	RYF1F2200BSX	Cabinet Cover Assembly(Front)	1	X
CA3	RYF2F2200BSA	Cabinet Cover Assembly(Rear)	1	OX
CA4	RJC111A	Terminal, Battery ⊕ Side	2	Y
CA5	RJC505Z	Terminal Spring, Battery ⊖ Side	2	Y
CA6	RYPF2200BSXG	Front Panel Assembly	1	X
CA7	RYEF2200N	Gyro Antenna Case Assembly	1	X
CA8	RUS238Z	Spring, Gyro Antenna	1	Z
CA9	RHE6021Z	Washer, Gyro Antenna	3	Z
CA10	XUC9FY	Circlip, Gyro Antenna	1	Z
CA11	RJF1044Z	Terminal, EXT. Antenna	1	Y
CA12	SHRA403	Latch, EXT. Antenna Terminal M'tg	2	Z
CA13	RKK114Z	Cover, Battery Compartment	1	Y
CA14	RBE13Z	Knob, FM AFC, BAND WIDTH	3	X
CA15	RBN379Z	Knob, Volume	1	X
CA16	RBN381Z	Knob, Bass, Treble, RF Gain	3	X
CA17	RBN380Z	Knob, Tuning	1	X
CA18	RBS103ZK	Knob, Band	2	X
CA19	RBS104Z	Knob, Tuning Speed	1	X
CA20	XTB3+50CFN	Screw, Cabinet Back Cover M'tg	6	Z
CA21	XEART160GDY	Telescopic Antenna, 7 Steps, 963mm	1	X
CA22	RKE140Z	Cover, Core Antenna	1	Y

Ref. No.	Part No.	Part Name & Description	Per Set	Remarks
CHASSIS				
	XAMR46T200	Pilot Lamp, Dial & Meter, 6V, 40mA	2	X
CH1	RSM2614Z-K	Meter, Tune, Battery, Marker	1	X
CH2	RJJ30Z-H	Jack, EXT. Power Source	1	Y
CH3	RJJ80A-C	Jack, Earphone & Rec. Out	1	Y
	RUS279Z	Spring, Band Switch Shaft	2	Z
	RNW423Z	Washer, Band Switch Shaft	2	Z
CH4	RHM71Z	Shaft, SW Band Switch	1	Z
CH5	RHM69Z	Shaft, Band Switch	1	Z
	RJE10Z	Cover, EXT. Power Source Jack	1	Y
CH6	XBA2C08TRO	Fuse, 250V, 800mA	1	X
CH7	RJF7A	Holder, Fuse	2	X
	XTW3+10FR	Red Screw, P.C. Board M'tg	3	Z
	RXEF2200BSXG	Dial Drive Assembly	1	X
CH8	RXE6F2200N	Selector, Drum Assembly	1	X
CH9	RDR20-3	Pulley, Dial	4	Z
CH10	RNW150-2	Washer, Dial	4	Z
CH11	RDG5649Z	Gear, Roller	1	Z
CH12	RDS5050Z	Spring, Gear	1	Z
CH13	RUS273Z	Spring, Gear	1	Z
CH14	RDE88Z	Shaft, Gear	1	Z
CH15	RKD423Y	Scale, Dial	1	Y
CH16 (Fig.9)	RDZ05Z	Cord(500m), Dial	1 Roll	Z
CH17	RXE11F2200N	Spread Dial Assembly	1	X
CH18	XUC6FW	Circlip, Spread Dial M'tg	1	Z
CH19	RUS283Z	Spring, Spread Dial M'tg	1	Z
CH20	RDE99Z	Washer, Tuning Shaft M'tg	1	Z
CH21	RUB145Z	Lever, Calibrator	1	Z
CH22	RDS3120A	Spring, Calibrator Lever	1	Z
CH23	RHM68Z	Spacer, Calibrator Lever	1	Z
ACCESSORIES				
	XEH1A1-P	Magnetic Earphone	1	Y
	RJA20Z-K	Power Cord, AC	1	Y
A1	RQX6071Z	Instruction Book	1	Y
A2	RQC9011Z	Belt	1	Y